



ALPHA COMPETITION SERIES FOR GLOCK PIVOTING SAFETY GEN 5

Thank you for purchasing this Timney Trigger. It has been designed and manufactured to provide you with a lifetime of dependable service. Each trigger is hand tested and calibrated on an action specific to your platform before leaving our factory. Please **read these instructions** fully before you begin installing the trigger, you'll be glad you did.

TOOLS NEEDED



Straight Punch or Glock Tool

TIMNEY TRIGGER GUARANTEE

Material and workmanship: This Timney trigger has been carefully inspected, tested and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, any necessary repairs, including parts and labor will be made at NO CHARGE to the purchaser providing that our inspection reveals parts were not damaged through accident, alteration, misuse, abuse or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific authorization, voids the guarantee.

**IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON
WWW.TIMNEYTRIGGERS.COM OR CONTACT US**

Need help with your install? Contact our customer service team via phone or email for assistance.

Phone: 623-223-1111 **Fax:** 623-223-1112 **Support:** technicalsupport@timneyusa.com

INSTALLATION INSTRUCTIONS

PARTS INCLUDED:



Silver Spring: normal reset, baseline spring




Red Spring: more positive reset, firmer spring



C-Washer: must be used in installation

- 1 Before beginning work on any firearm, make sure to remove the ammunition source and double check to ensure the chamber is empty.
- 2 Remove the slide from frame, then using a punch, push out the cross pins.
- 3 Remove the locking block, slide stop, and trigger assembly.
- 4 Remove the trigger, trigger bar, and spring receiver.
- 5 Loosen the button-head screw in the Glock trigger housing about halfway and then install the Timney sear assembly into the Glock trigger housing.
- 6 Install the c-washer. Tighten the screw with the 1/16 flag wrench after pushing the c-washer in all the way.
- 7 Slide the return spring (either red or silver) into the small hole on the front of the trigger shoes, then click it into place.
- 8 Mate the trigger bar with the receiver and insert the trigger assembly into the frame.
- 9 Insert the slide stop lever.
- 10 Place the locking block halfway down in the frame, make sure the return spring is toward the magwell before fully inserting the locking block.
- 11 Reinstall the cross pins, then reinstall the slide.
- 12 Perform a safety and function check.
- 13 You are now ready to enjoy your new Timney Trigger!

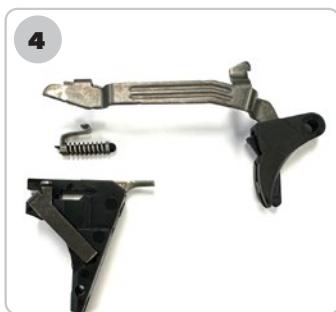

IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON WWW.TIMNEYTRIGGERS.COM OR CONTACT US

Need help with your install? Contact our customer service team via email or phone for assistance.

Phone: 623-223-1111 Fax: 623-223-1112 Support: technicalsupport@timneyusa.com

