

-LAKE·LINE-

SPR-HLCT-SLD-060 Hellcat Extended Slide Release

Installation Instructions:

Tools required: Eye protection, a mallet and a small punch. A “hook” tool or small screwdriver for lifting the spring.

1. Check that pistol is unloaded and remove magazine.
2. Check one more time that pistol is not loaded.
3. Remove the slide per your Hellcat instruction manual.
4. You should have your grip of the pistol, looking something like this:



5. Partially drive out the front pin to release the factory slide release, about this far:



6. You can then slide the slide release back and up and remove it.
7. From the top, slide the new slide release in and down into place. As you do, you will need to lift the spring so it is on top of the slide release. It should look like this as you lift the spring and slide the release into

place:



8. Finally, push the pin back into place. You may need to wiggle the release a little to get it to align with the pin:



9. Check that it moves freely and the spring pushes downward on the release. You are ready to reinstall the slide:



Thank you! If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com