

-LAKELINE-

Part # STR-RD-G3C-099

Lakeline SureFire Stainless Steel Striker for Taurus G-Series Pistols Installation Instructions:


Modifications to your pistol are done at your own risk.

Tools required:

- Eye protection (springs can get you!!!)
 - Flat Blade Screwdriver
1. Check that pistol is unloaded and remove magazine.
 2. Visually confirm the pistol chamber is not loaded.
 3. Field strip pistol per the Taurus Instruction Manual
 4. You should have your slide, and the tool you will use to press the striker guide forward to release the back plate looking something like this:



5. To remove the back plate on the slide, the striker guide must be pressed using your tool towards the muzzle and the back plate slides down and out. Here as shown in the photo below:

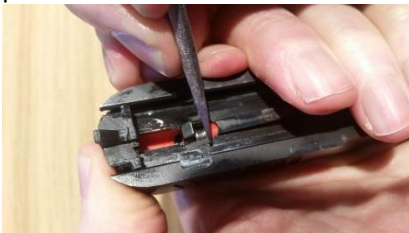


6. Remove the back plate so you have your slide looking like this:



7. Slide out the striker assembly:



8. A trick for taking the striker assembly apart is to insert it into the striker channel backwards so the spring is easier to compress to remove the keepers. This is also the part you want to be extra sure to have your eye protection on for. Here is how the slide is used to help:

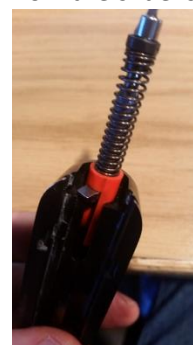

9. When you compress the spring from the top (muzzle end) of the striker, the keepers can be slid out each side. You can see how the keeper works from the disassembled striker below:



-LAKELINE-

10. Reverse the disassembly process and assemble the striker assembly using new part(s). Use the striker channel as a holder for the striker guide (backwards) as with disassembly. The order is a) firing pin, b) return spring (small one), c) striker guide, d) the firing pin spring (long one), and e) retainer(s):



11. If replace springs, replace both springs together even if you feel one is “still good”. Springs are wear parts and should be periodically replaced.
12. Clean everything, the striker assembly, the striker channel, etc. Put the striker assembly into the slide, and depress it using your screwdriver or a punch far enough where you can reinstall the back plate:



13. The back plate should click into place:



14. Re-assemble the pistol in the standard way and check functionality.

Thank you! If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com. No customer service will be conducted via social media or forums.