

-LAKELINE-

Part # STR-RD-GS-ASSY

Stainless Steel Striker Assembly – Taurus G-Series Pistols

Installing the Lakeline LLC striker guide disables the Taurus Security System (TSS) key locking disabling device on the Taurus PT111 G2, 709 & 740 pistols. If your pistol has the TSS (older models), please email info@lakelinellc.com for additional instructions or check our website under installation instruction. If you are unsure, you will find out in step 9.

Modifications to your pistol are done at your own risk.

Tools required:

- Eye protection
- Flat Blade Screwdriver

1. Check that pistol is unloaded and remove magazine.
2. Visually confirm that pistol chamber is not loaded.
3. Field strip pistol per the Taurus Instruction Manual.
4. You should have your slide, and the tool you will use to press the striker guide forward to release the back plate looking something like this:



5. To remove the back plate on the slide, the striker guide must be pressed using your tool towards the muzzle and the back plate slides down and out. Here as shown in the

photo below:



6. Remove the back plate so you have your slide looking like this:



7. Slide out the striker assembly:



8. Clean the backplate and the striker channel and then insert the new striker assembly into the slide. No lubrication required. Depress the end of the striker assembly using your screwdriver where you can reinstall the back plate, it should click into place.



-LAKELINE-



9. If the striker assembly will not fully insert, you may have the Taurus Security System (see note at beginning of instructions).
10. Re-assemble the pistol and check functionality.

Thank you! If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com. No customer service will be conducted via social media or forums.