

LAKELINE LLC

Installation of the Lakeline LLC Recoil System for Taurus TX22, G3, GX4, G2 pistols (PT111 G2, G2C and G2S) and TH9, TH9C, TH40 :

Supplies:

- Gun grease or oil.

Procedure

- Check that pistol is unloaded and remove magazine.
- Field strip the pistol, removing the slide and factory guide rod assembly per the factory user manual.
- Lube the Lakeline Recoil Assembly with a proper gun grease or oil and install the recoil assembly. *Orient the recoil assembly so the very end of the coil of the outside spring on the muzzle end is at the top of the slide, at the noon position where the barrel is the 12 on the clock face.*
- Reassemble the pistol.



- Check functionality, cycle the slide, lock it back, etc.

That's it! The only time it is required to disassemble the recoil assembly is to change springs. Heat can help to get the locking compound to release. You may need to hold the guide rod in a padded vise for disassembly after applying heat. If that is too much, a gunsmith can change the springs for you.

Thank you! If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com