

LAKELINE LLC

Part # T-SSR-SS-038



Lakeline G Series Stainless Steel Striker Spring Retainer

Installation Instructions:

Modifications to your pistol are done at your own risk.

This part fits the Taurus G2C, G3C, G3, G3X, G3XL, PT111 G2 and the GX4.

Tools required:

- Eye protection
- Small Flat Blade Screwdriver or tool that can be used to push the striker guide forward

1. Check that pistol is unloaded and remove magazine.
2. Check one more time that pistol is not loaded.
3. Field strip pistol per the Taurus Instruction Manual and make sure the Taurus Security System is completely in the unlock position.
4. You should have your slide, and the tool you will use to press the striker guide forward to release the back plate looking something like this:



5. To remove the back plate on the slide, the striker guide must be pressed using your tool towards the muzzle and the back plate slides down and out. Here as shown in the

photo below:



6. Remove the back plate so you have your slide looking like this:



7. Slide out the striker assembly:



8. A trick for taking the striker assembly apart is to insert it into the striker channel backwards so the spring is easier to compress to remove the keepers. This is also the part you want to be extra sure to have your eye protection on for. Here is how the slide is used to help:



9. When you compress the spring from the top (muzzle end) of the striker, the keepers

LAKELINE LLC

can be slid out each side. You can see how the keeper works from the disassembled striker below:



10. Put the striker assembly back into the slide backwards, compress the spring, and slide on the new striker spring retainer. It should look like this when done:



11. If you removed any of the springs or striker guide, make sure you have the return spring back in the right place. It is the first part put on the striker, then the striker guide, then the striker spring. Here is a photo showing the return spring on the striker. That is the first step, then the striker guide is next:



12. Put the striker assembly into the slide, and depress it using your screwdriver or a punch far enough where you can reinstall the back plate:



13. The back plate should click into place:



14. Re-assemble the pistol in the standard way and check functionality.

Thank you! If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com.