

Installation Guide

Tools required:



Eye PPE



Gun Grease

If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com.

Thank you!



Ensure your firearm is UNLOADED. There should be no magazine in the gun *and* no round in the chamber. Visually and physically inspect to ensure it is unloaded.

Lakeline Stainless Steel Recoil Assembly for Taurus TX22 Gen2

Part Number: RA-TX22-GEN2-xxx

1. Again – Ensure firearm is unloaded!
2. Eye protection is recommended
3. Field strip the pistol, removing the slide off the frame. Remove the recoil by gently pressing forward on the rear of the recoil.
4. Confirm the new recoil alignment. It should look like Fig. 2; if it looks like Fig.3 (i.e., front spring/bushing not aligned), with the back of the assembly on a flat surface gently depress the spring and align
5. Position the front of the recoil in the slide bucket and snap into place with the rear clicked into barrel arm.
6. Apply a small amount of gun grease.

Standard vs. +2lb vs. -2lb.

1. We have the option available of standard weight, +2lb, or -2lb for purchase.
2. No mark is Standard, +2lb is **RED**, and -2lb is **BLUE** (Fig.4 and Fig5).



Fig.1



Fig.2

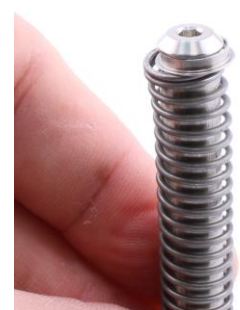


Fig.3



Fig.4



Fig.5