

Installation Guide

Tools required:



Eye PPE



Gun Grease

If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com.

Thank you!



Ensure your firearm is UNLOADED. There should be no magazine in the gun *and* no round in the chamber. Visually and physically inspect to ensure it is unloaded.

Lakeline Stainless Steel Target Barrel for Taurus TX22 Gen2

Part Number: T-BT2C-TX22-107-xxx

1. Again – Ensure firearm is unloaded!
2. Eye protection is recommended
3. Field strip the pistol, removing the slide off the frame. Remove the recoil by gently pressing forward on the rear of the recoil (Fig.1).
4. Slide out barrel, slide in new barrel. Apply a light coating of gun grease to outside of barrel to aid break-in.
5. Testing found all barrels to be “drop in”, but minor fitment may be needed. If so, please contact us for advice.
6. Position the front of the recoil in the slide bucket and snap into place with the rear clicked into barrel arm.
7. Reassemble pistol and manually cycle to test. Minor rubbing is fine – it will break-in within a few magazines.
8. If thread cap is not staying tight, a small amount of blue thread locking compound will secure it.



Fig.1



Fig.2



Fig.3