


# LAKELINE LLC

## Guide Rod Installation Instructions:

- Check that pistol is unloaded and remove magazine.
- Check one more time that pistol is not loaded.
- Field strip pistol per the Kahr Instruction Manual.
- Replace the guide rod with your Stainless Steel Guide Rod. Make sure the “closed” end of the spring is at the flange end of the guide rod. It goes at the chamber end of the barrel.
- Lube the guide rod and spring.
- Re-assemble the pistol in the standard way.

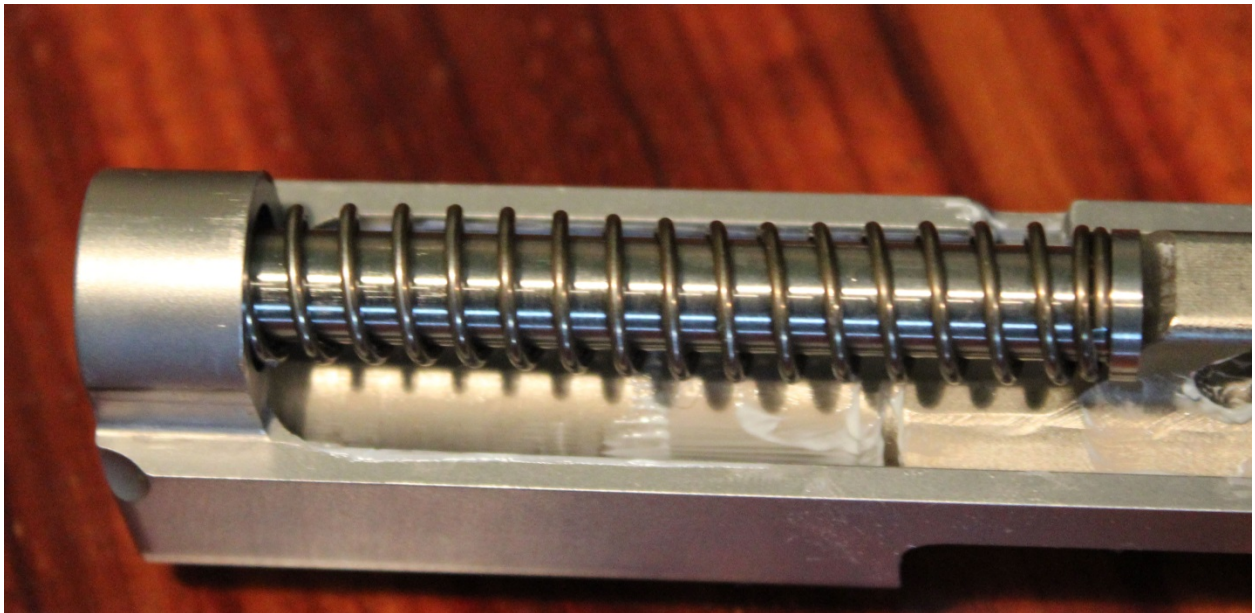

Thank you! If you have any questions or problems, the best way to contact us is by email at [info@lakelinellc.com](mailto:info@lakelinellc.com)