

LAKELINE LLC

Lakeline HK VP9/VP9SK/VP40 Stainless Steel Striker Support Sleeve Installation

Instructions:

Tools required:

- Eye protection
- Flat Blade Screwdriver

1. Check that pistol is unloaded and remove magazine.
2. Check one more time that pistol is not loaded.
3. Field strip pistol per the VP Series Operator's Manual.
4. You should have your slide, and the screwdriver you will use to press the support sleeve forward to release the back plate. Like this but remove the barrel and recoil assembly::



5. To remove the back plate on the slide, the support sleeve must be pressed using your tool towards the muzzle and the back plate slides down and out. Here as shown in the photo below:



6. Remove the back plate, and then the striker assembly, so you have your assembly like like this:



7. A trick for taking the striker assembly apart is to insert it into the striker channel backwards so the spring is easier to compress to remove the keepers. This is also the part you want to be extra sure to have your eye protection on for. Here is how the slide is used to help:



8. When you compress the spring from the top (muzzle end) of the striker, the keepers can be slid out each side. You can see how the keeper works from the disassembled striker below:



LAKELINE LLC

9. Check the fit of the striker in the striker guide. Reverse the disassembly process and assemble the striker assembly using the Lakeline striker guide:



Thank you! If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com. No customer service will be conducted via social media or forums.

10. Clean everything, the striker assembly, the striker channel, etc. Put the striker assembly into the slide, and depress it using your screwdriver like you removed it but far enough where you can reinstall the back plate:



11. The back plate should click into place:



12. Re-assemble the pistol in the standard way and check functionality.