

LAKELINE LLC

Sig P365 Metal Follower Installation

Instructions:

- Check that pistol is unloaded and remove magazine.
- Depress the round “button” on the bottom of the magazine baseplate and slide baseplate towards the front, rounded edge of the magazine to remove it. BE CAREFUL TO HOLD THE SPRING as it can come out with considerable force. Wear safety glasses.
- Remove the magazine baseplate, baseplate retainer, spring and follower.
- Insert the Metal Magazine follower as pictured below:



- Insert the magazine spring such that the open end is towards the curved, front of the magazine (just as with the factory follower).
- Carefully re-install the magazine baseplate retainer and baseplate.

- Lubrication with either a dry lubricant or very lightly lubricating with a gun lube or silicon for the magazine follower. Put the lubricant on a clean rag and lightly coat the follower
- Your magazine is ready to use.

When loading the magazines, load the first round by hand before using a magazine loader.

The steel bits that contact the magazine follower on some loaders, like the Uplula, can mark or ding the followers.

Light wear, including wear through the anodize, is normal in some areas. Particularly on the part the slide stop contacts and by the front of the depression for the edge of the case of the rounds the black anodize will eventually wear through. Also, on the front and rear where the magazine slides against the magazine the finish will show wear with use.

Thank you! If you have any questions or problems, the best way to contact us is by email at info@lakelinellc.com