


# -LAKELINE-

## Lakeline Red Dot Sight Mounting Plate Installation

### Instructions:

- Remove the rear sight. A sight pusher is recommended and there is a screw or set screw that will need to be removed from the sight before pressing it out.
- Install the Lakeline Sight Mount in the dovetail. It is intended to fit tightly. Some fitting will be required. This can involve filing, soft faced vices, etc. Either experience or a gunsmith is recommended to prevent damage to your pistol, the mounting plate, and/or the sight. Once you modify the plate, it cannot be returned so be sure it is a go before taking files, etc. to the plate. When pressed in place, it should be centered and look like:

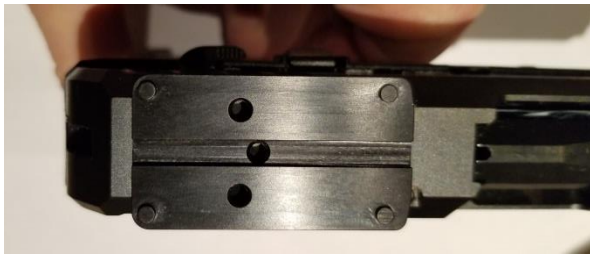

- Apply medium strength thread locker to the set screw threads and to the base of the set screw. Tighten set screw using a 1/16 inch hex wrench.
- Place the red dot sight on the Lakeline Sight Mounting Plate. Putting a small piece of paper, wax paper is a good choice, between the red dot sight and the mounting plate makes it easier to remove the sight and will keep thread locker off of the red dot sight.
- Apply medium strength thread locker to the provided mounting screws that are correct for the sight you are mounting. Torque mounting screws to 15in-lbs

- The included screws are:
  - 2 Button Head Cap Screws - Provided for Vortex Viper and Venom Sights
  - 2 Flat Head Cap Screws - Provided for Burris FastFire and Docter Sights
- The screws that are included with this mount require a 5/64" Allen wrench and the set screw a 1/16" Allen wrench for installation.



No liability is expressed or implied for damage or injury which may result from improper installation or use of this product.

Thank you! If you have any questions or problems, the best way to contact us is by email at [info@lakelinellc.com](mailto:info@lakelinellc.com)

